



Model XNB07Z Parts List

Item#	Part#	Description	Q'ty
001	265995-6	TAPPING SCREW 4X18	12
002-1	1831E2-3	HOUSING SET	1
	C10 263032-0	RUBBER PIN 4	2
	D10	INC. 17	
003	650060-8	SWITCH C3JR-5BM-PAND-2	1
004	232848-4	COMPRESSION SPRING 4	1
005	413X17-2	TRIGGER	1
006	632V61-0	SWITCH UNIT	1
007	232842-6	LEAF SPRING	1
008	422B50-1	HOLDER CUSHION	4
009	266130-9	TAPPING SCREW BIND PT 3X16	2
010	1830M8-1	BATTERY HOLDER SET	1
	C10 263005-3	RUBBER PIN 6	2
	D10	INC. 11	
011	1830M8-1	BATTERY HOLDER SET	1
	C10 263005-3	RUBBER PIN 6	2
	D10	INC. 10	
012	654908-6	TERMINAL	1
013	232876-9	COMPRESSION SPRING 7	2
014	422B17-9	BATTERY CUSHION	2
015	266007-8	TAPPING SCREW BIND PT 3X10	2
016	620P22-6	SWITCH CIRCUIT COMPLETE	1
017-1	1831E2-3	HOUSING SET	1
	C10 263032-0	RUBBER PIN 4	2
	D10	INC. 2	
018	265D66-3	H.S.H.BOLT M5X20 WITH WG	1
019	629C77-0	STATOR COMPLETE	1
020	266130-9	TAPPING SCREW BIND PT 3X16	5
021	1830P6-6	MOTOR HOUSING SET	1
	D10	INC. 22	
022	1830P6-6	MOTOR HOUSING SET	1
	D10	INC. 21	
023	210021-9	BALL BEARING 607LLB	1
024	519862-0	ROTOR ASS'Y	1
	D10	INC. 23,25	
025	210223-4	BALL BEARING 608ZZ	1
026	922233-6	H.S.H.BOLT M5X20 WITH WR	2
027	122G07-9	GEAR ASSEMBLY	1
028	227B41-5	INTERNAL GEAR 44	1
029	227B54-6	SPUR GEAR 13	5
030	141U61-8	CARRIER COMPLETE	1
031	211423-9	BALL BEARING 6806DDW	1
032	422B18-7	GEAR CHSHION	4
033	685722-9	SPONGE	1
034	922342-1	HEX. SOCKET HEAD BOLT M6X25	4
035	327D23-0	VALVE CAP	1
036	213007-9	O RING 8	1
037	243138-0	VALVE CORE	1
038	312E84-9	TOP CAP	1
039	413X16-4	SLIDE RING	2
040	213A70-8	X-RING 40	1

041	141U59-5	DRIVER COMPLETE	1
042	327D22-2	CYLINDER	1
043	213663-5	O RING 55	2
044	422B15-3	SEAL RING	1
045	141U65-0	CHAMBER COMPLETE	1
046	422B14-5	FRONT CUSHION	1
047	312E81-5	NOSE	1
048	265D55-8	H.S.H BOLT M5X12	3
049	422B16-1	SIDE CUSHION	1
050	265173-8	PAN HEAD SCREW M3X8	2
051	620N67-2	SENSOR CIRCUIT	1
052	961053-3	RETAINING RING (EXT) S-13	1
053	422B16-1	SIDE CUSHION	1
054	620R02-4	LED CIRCUIT	1
055	137163-0	SWITCH ASSEMBLY	1
057	232843-4	LEAF SPRING	1
058	253595-4	FLAT WASHER 14	1
059	141U60-0	HOLDER COMPLETE	1
060	347C07-6	PIN COVER	1
061	232846-8	COMPRESSION SPRING 4	1
062	256A54-3	PIN 5	9
063	327D06-0	LIFTER	1
064	327D05-2	LIFTER SHAFT	1
065	211236-8	BALL BEARING 6002DDW	1
066	312E82-3	LIFTER CAP	1
067-1	265D66-3	H.S.H.BOLT M5X20 WITH WG	2
068	232847-6	COMPRESSION SPRING 12	1
069	264027-6	HEX LOCK NUT M6-10	1
070	327D17-5	ADJUSTER SLEEVE	1
071	347C06-8	CONTACT ARM	1
072	216001-0	STEEL BALL 3.5	1
073	232417-1	COMPRESSION SPRING 3	1
074	413X07-5	ADJUSTER DIAL	1
075	313502-0	CONTACT TOP	1
076	213005-3	O RING 5	2
077	327D20-6	ADJUSTER SHAFT	1
078	313503-8	DRIVER GUIDE	1
079	265D55-8	H.S.H BOLT M5X12	2
080	122J24-7	MAGAZINE ASS'Y	1
	D10	INC. 81-99	
081	313504-6	UNDER DRIVER GUIDE	1
082	413X12-2	MAGAZINE CAP	1
083	922212-4	HEX. SOCKET HEAD BOLT M5X12	1
084	1411S7-7	MAGAZINE COMPLETE	1
	C10		
085	8088G5-9	CAUTION LABEL	1
086	347C08-4	NAIL RAIL	1
087	141U43-0	SPIRAL SPRING COMPLETE	1
088	256428-2	PIN 5-8	1
089	262054-7	URETHANE RING 3	1
089	347C10-7	PUSHER	1
090	234084-8	COMPRESSION SPRING 3	1
091	413X13-0	PUSHER LEVER	1
092	256A57-7	PIN 4	1
093	347C09-2	LOCK PLATE	1
094-1	233339-8	COMPRESSION SPRING 3	1
095	262054-7	URETHANE RING 3	1

096	256A57-7	PIN 4	1
097	422B13-7	PUSHER CUSHION	1
098	265915-0	HEX. SOCKET HEAD BOLT M6X10	1
099-1	267214-6	FLAT WASHER 6	1
100	8150B3-3	XNB07 NAME PLATE	1
101	8150B4-1	XNB07 SERIAL NO.LABEL	1
A01	141X57-7	HOOK ASSEMBLY	1
A02	265D55-8	H.S.H BOLT M5X12	3
A03	347C14-9	HOOK	1
A04	4130T1-3	NOSE ADAPTER	1
A05	783202-0	HEX. WRENCH 4	1
A06	824937-5	PLASTIC CARRYING CASE	1
	C10 162271-8	LATCH	2
A07	836321-2	INNER TRAY	1