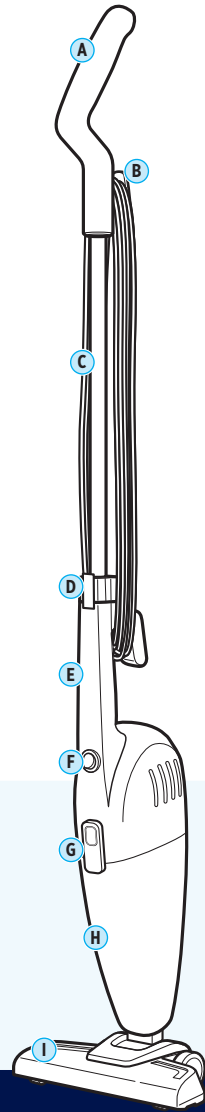 




FEATHERWEIGHT STICK VACUUM

2033 SERIES

Important Safety Instructions2
What's in the Box?.....2
Warranty.....2
How to Use Your Vacuum.....3
Emptying the Dirt Tank3
After-Cleaning Care.....4
Troubleshooting.....4



Product Overview

- A. Hand Grip
- B. Cord Wrap
- C. Handle
- D. Quick Release Handle
- E. Hand Vacuum Grip
- F. Power Switch
- G. Dirt Tank Latch
- H. Dirt Tank (filter inside)
- I. Removable Floor Nozzle



Meet your new BISELL® product!

Go to support.BISELL.com for a walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Always connect to a polarized outlet (one slot is wider than the other). Do not modify the polarized plug to fit a non-polarized outlet or extension cord.

- Do not leave vacuum cleaner when it is plugged in. Unplug from outlet when not in use and before servicing.

- Do not use outdoors or on wet surfaces.

- Do not allow to be used as a toy. Close attention is necessary when used by or near children.

- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.

- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.

- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

- Do not handle plug or vacuum cleaner with wet hands.

- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn OFF all controls before plugging or unplugging vacuum cleaner.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without filters in place.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Use only on dry, indoor surfaces.
- Keep appliance on a level surface.
- Do not carry the vacuum cleaner while it is running.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

COMMERCIAL USE OF THIS UNIT voids the MANUFACTURER'S WARRANTY.

THIS APPLIANCE HAS A POLARIZED PLUG

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

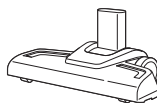 
What's in the Box?



Hand Vacuum



Extension Wand



Foot Assembly



Crevice Tool

Warranty

 
 
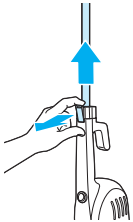 
Limited 1-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.

Terms and Conditions

 

Your purchase is subject to the BISSELL® Terms and Conditions, which includes dispute resolution through arbitration and class waiver. For complete terms or to opt out from arbitration or class waiver, visit BISSELL.com/terms-of-use or call 1-800-237-7691.

How to Use Your Vacuum

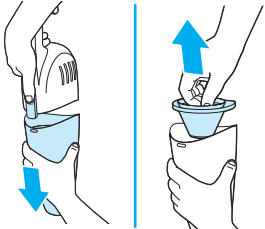 
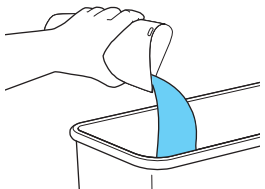 
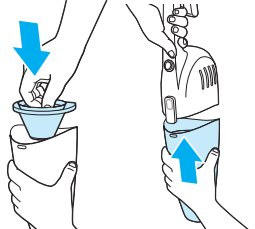 
Cleaning Your Floors

		
1. Open the latch at the top of the hand vacuum, fully insert the extension wand, then press the latch to secure.	2. Insert the foot into the bottom of the hand vacuum and press firmly to secure.	3. Release the latch at the top of the hand vacuum and pull to remove the extension wand.

Above-Floor Cleaning

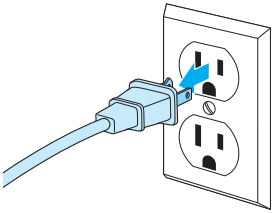 
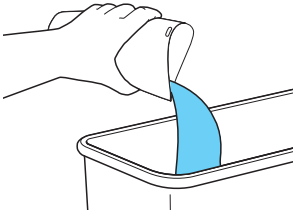 

	
4. Attach either the foot or the crevice tool to use the hand vacuum for above-floor cleaning.	

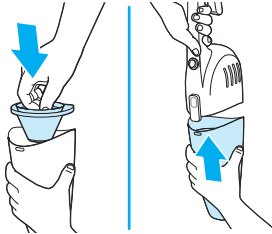 

Emptying the Dirt Tank

		
1. Turn the vacuum OFF and hold vertically. Press the dirt tank latch and pull out the tank. Pull up to remove filter.	2. Empty dirt tank into a trash bin, and gently tap against side to remove any build up.	3. Replace the filter, then securely attach the dirt tank to the vacuum by fitting it onto the hand grip, ensuring it is correctly secured.

⚠ WARNING Do not operate vacuum with damp or wet filters or without all filters in place.

After-Cleaning Care

		
<p>1. Turn the vacuum OFF. Unplug it by grasping the plug (not the cord) and disconnecting it from the outlet.</p>	<p>2. Follow the steps in “Emptying the Dirt Tank” to remove the dirt tank and filter. Empty the tank into a trash bin. If needed, rinse the tank with warm water and mild detergent, and allow it to dry completely before reattaching.</p>	<p>3. Shake the filter over a trash bin and tap gently to clear debris. Note: After heavy use, wash by hand in warm water with mild detergent. Rinse thoroughly and let dry completely before replacing. Replace if torn.</p>

	
<p>4. Replace the filter, then securely attach the dirt tank to the vacuum by fitting it onto the hand grip, ensuring it is correctly secured.</p>	<p>5. Loop power cord around cord wraps on the handle and clip the molded plug to power cord to secure.</p>

Note: Any other maintenance or servicing not included in this manual should be performed by an authorized service representative.

Troubleshooting

Problem	Possible Cause	Remedies
No power	Plug not firmly in outlet.	Check outlet.
	Blown fuse/breaker.	Check/replace fuse; reset breaker.
Low suction or Dust blows out of vent	Filter clogged, wet or dirty.	See “After-Cleaning Care”.
	Dirt tank clogged.	See “After-Cleaning Care”.
	Filter not secured in frame.	See “After-Cleaning Care”.

⚠ WARNING To reduce the risk of electrical shock, turn power switch OFF and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.